

smartfriendz

Bed

Written By: serge vieillescaze





PARTS:

- [m4x12](#) (12)
- [m4 nut](#) (8)

Step 1 — Bed




- **EN:**
- prepare all material.
- **FR:**
- Préparer le matériel comme sur la photo

Step 2




- **EN:**
- Insert linear bearing this way. View from top
- **FR:**
- Insérer les guides linéaires come cei. Vue de dessus

Step 3

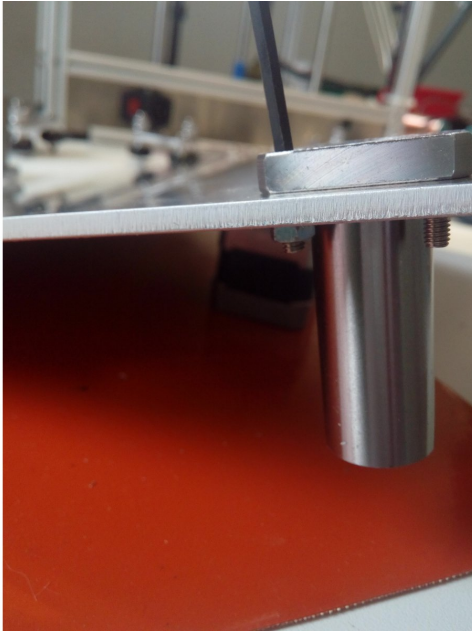

- EN:
- Insert 4 M4x12 screw and block with 4 M4 nuts
- FR:
- Insérer 4 M4x12 et serrer avec 4 écrous freins M4

Step 4

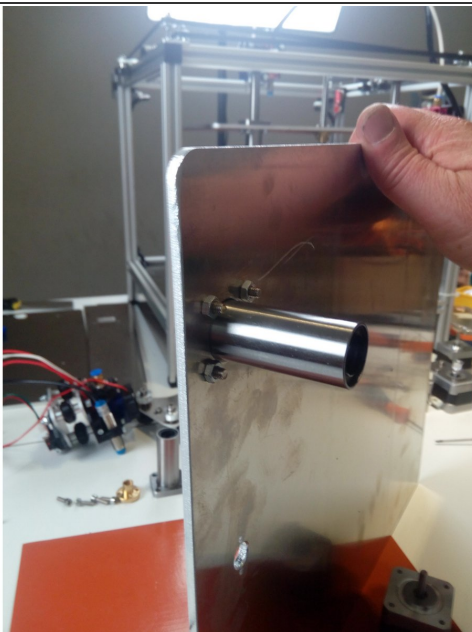

- Insert wisdom here.

Step 5



- Insert wisdom here.

Step 6



- screw nut inserted from bottom

Step 7



- Insert wisdom here.

Step 8



- Insert wisdom here.

Step 9



- Insert wisdom here.

Step 10



- prepare the silicon pad. be carefull
it's gluing very well

Step 11



- finished bed